 
 


7" HD screen video baby monitor

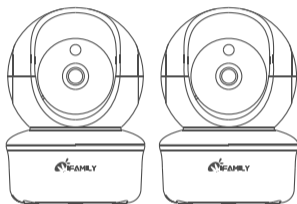

WARNING:

Keep this cord out of reach of children.
The cord needs to be at least three feet
away from the child at all times.
Do not use with an extension cord.
Do not remove this tag.
Children have STRANGLED in cords.

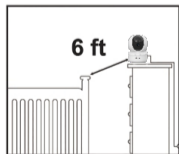


Content

1. WARNING AND SAFETY INSTRUCTIONS	1-2
2. PRODUCT OVERVIEW	3
2.1 Parent unit overview	3
2.2 Baby unit overview	3
2.3 Icon overview	3
2.4 Product list	4
3. POWERING ON YOUR PRODUCT	4
4. USING THE BABY MONITOR	5
4.1 Music setting	5
4.2 VOX setting	5
4.3 Zoom in/out setting	5
4.4 Split screen	6
4.5 Switch & Scan cameras	6
4.6 Add camera	6
4.7 Delete camera	7
4.8 Temp unit setting	7
4.9 Temp alert setting	7
4.10 Time Setting	8
4.11 Language setting	8
4.12 Timer setting	8
4.13 Alert volume setting	9
4.14 Frequency setting	9
4.15 Night vision setting	9
4.16 Camera angle setting	10
5. TROUBLE SHOOTING	10-11
6. TECHNICAL DATA	11
7. FCC REQUIREMENT	12
8. MAINTENCE AND WARRENTY	12

1. WARNING AND SAFETY INSTRUCTIONS

 Follow these safety precautions to prevent fire, injury or damage to the product.
Read and keep instructions: it is very important that you read all the safety and operating Warnings:

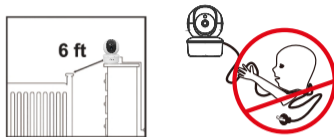

STRANGULATION HAZARD: Children can become entangled in cords. Make sure the baby unit, parent unit and mains adapter cables are kept out of reach of you baby and other young children at all times, at least 6 feet away.

CHOKING HAZARD: This product contains small parts which may cause choking. Exercise care when unpacking and assembling the product and keep the small parts away from children.

RISK OF SUFFOCATION: Keep all packaging materials and protective foils out of reach of children.

DANGER FROM POWER CORDS: To avoid possible danger from power cords the cords should be secured and never be hung on or near the crib. Never place the baby unit or parent unit inside your baby's crib, bed or playpen.

DO NOT HANDLE ROUGHLY, DROP OR THROW: Baby monitor is a high-quality electronic device which must be handled with care.

WATER AND MOISTURE: The product should not be exposed to rain, moisture, or splashing. Never use or place the product in or near moisture or water.

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION: Your video monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.

VENTILATION: This product should not be used on a bed, sofa, rug or similar surface that may block the ventilation or speaker openings, or be placed in an enclosed area, such as a bookcase or drawer that may impede air flow. Never cover the product with clothes, towels. Never cover the product with clothes, towels, blankets or any other item.

THIS PRODUCT IS NOT A TOY: It should be kept out of children's reach.

KEEP AWAY FROM SOURCES OF HEAT: This unit should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat. The unit should not be

left in direct sunlight.

BATTERY: Before you use the product, we recommend you fully charge the battery of the parent unit, so that it continues to work if you disconnect it from the power supply to carry it to another location.

INSTALLATION LOCATION: The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least 5 feet from other electronic equipment, such as microwave ovens or Wi-Fi routers, otherwise they could cause interference. If this occurs, move the baby and parent units to another location.

RANGE: Range of all baby monitor is always measured in an open space. The actual range may be shortened due to environmental obstacles (such as concrete walls).

DAMAGE REQUIRING SERVICE: This product should be serviced by qualified personnel only.

DO NOT TRY TO OPEN AND REPAIR THE PRODUCT: If you have any problems with the product, please contact the authorized distributor. In case of unusual noises or smells originating from the device, immediately disconnect the product from the power outlet and contact authorized. If the product becomes dirty, use a lightly damp soft cloth to wipe surfaces, taking care to not allow water into any openings.

IMPORTANT: This baby monitor is designed only for hearing the baby's voice and seeing the images of the baby. This product is not a medical device and should not be used as a substitute for responsible adult supervision. It is important that you regularly check on your baby personally.

1.2 Safty Instructions for AC Power Adapter

The adapter should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.

During continual use, the power adapters may become warm to the touch. This is normal and should not be a cause of concern.

Examine intactness of the power cord and its plug.

The adapter must be handled with care: Do not handle roughly, drop or throw.

When removing the power adapter from the wall outlet, hold and pull from the receptacle.

Do not pull on the cable itself or bend the cable as that will put additional stress on the cable and could lead to damages.

Do not touch the power adapter with wet hands or allow liquids to spill on it.

Make sure the mains adapter cables are kept out of reach of your baby and other young children at all times.

To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib.

Do not replace the plugs or cable on your power adapter. This product should only be used with the AC power adapter supplied by the manufacturer, as included in this package.

Never cut, damage or bend the power cord.

Do not put any objects on top of the power cord, which could cause overheating, damage, combustion and electronic cut.

Do not leave the power adapter connected to the wall outlet when it is not plugged into the baby or parent unit.

Warning

Do not replace the power cord with non-original substitutes. Improper connection may cause electrocution. Do not place the AC adaptor cable in a high wear and tear location. Never use a frayed or compromised cord.

intended for indoor use only.

1.3 Safty Instructions for Li-ion battery (Non removable pre-installed battery)

Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries.

If a battery leaks, do not let the battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, and seek medical assistance.

The battery should not be exposed to direct sunlight or heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use only the battery pack supplied with the product or the same type, sold by the manufacturer or its authorized distributors.

Improper use or use of unapproved batteries may present a risk of fire, explosion, or other hazards, and may invalidate the warranty.

If you believe the battery is damaged, remove product from the charge and stop using the product.

 
Never use a damaged battery.


1.4 Information on disposal of product

Always dispose of your product (with the non removable pre-installed battery) at the end of their life in an environmentally responsible way and in accordance with your local waste disposal requirements. All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.

 
2.PRODUCT OVERVIEW

2.1 Parent unit overview:

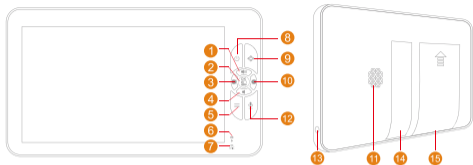





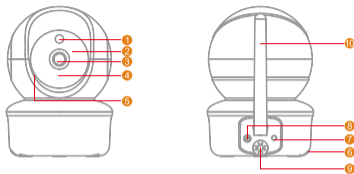





- 1 Volume up**
Press Volume+ to increase the volume.
- 2 OK key**
Press the OK key to confirm.
- 3 Brightness down**
Press the Bright- to decrease the brightness.
- 4 Volume down**
Press volume- to decrease the volume.
- 5 Menu**
Short press the menu key the menu will pop up, and press again to Exit.
Press and hold the Menu key around 2 seconds to operate Zoom in/out.
- 6 Power&Charging LED**
*The LED shows red when charging under the display is turn off state.
*The LED shows orange when charging under the turn on state.
*The LED shows green after the battery is fully charged.
- 7 Microphone**
When talk to the baby, collect the voices of the parents.
- 8 Power key**
Long press to turn on/off the monitor; short press to screen on/off.
- 9 Pan/Tilt**
Press the key  to enter into the Pan/Tilt mode.
- 10 Brightness up**
Press the Bright+ to increase the brightness.
- 11 Speaker**
Hear the sound from the baby.
- 12 Talk to baby**
To talk, press and hold the talk key on the front of the monitor.
- 13 DC jack**
Charge the monitor by connecting the Power Adapter to the monitor and a socket.
- 14 Stand**
Monitor placement stand.
- 15 Battery door**

2.2 Baby unit overview:




- 1**—Light sensor
- 2**—Infrared LEDs
- 3**—CMOS lens
- 4**—Power LED
- 5**—MIC
- 6**—Speaker
- 7**—Pairing key
- 8**—DC jack
- 9**—Temperature sensor
- 10**—Antenna

2.3 Icon overview:


	----- Lullaby		----- Time Format
	----- VOX		----- Brightness
	----- Zoom		----- Timer
	----- Camera		ALERT ----- Alert Volume
	----- Setting	50/60Hz ----- Frequency Setting	
°C/°F ----- Temp C/F			----- Temp

2.4 Product list:

 - Parent Unit x1
- Baby Unit(Camera) x2
- AC Power Adapter x3
- Screw Set x2
- User Manual x1

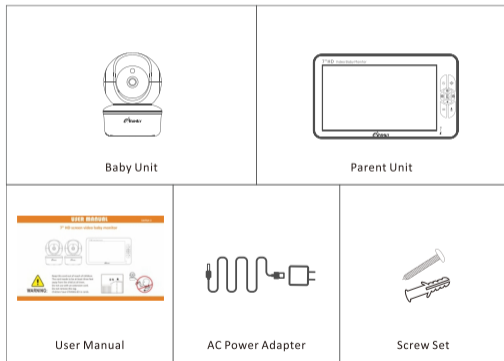

 3. POWERING ON YOUR PRODUCT

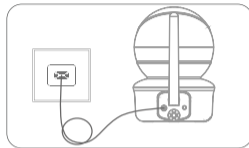


Step1: Charge the baby unit




Step2: Press  for two seconds to Power on the parent unit.



 Step3: Set the parent unit to prepare for connecting.

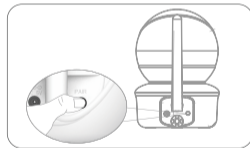







Step4: Press the PAIR button for two seconds until it has been paired (the ★ symbol appears before ).

 
NOTE: If the baby unit and parent unit has been connected, the steps 3 and 4 are unnecessary.

4.USING THE BABY MONITOR

Music setting

- 1.Press menu button  to access menu.
choose  and press 
- 2.select the lullaby you want to play and press 
- 3.Press the NAVIGATION key to select the duration and music volume.
- 4.In order to stop the lullaby playback,select 
- 5.Press the menu button  to exit after finish.

 
NOTE:The lullaby default setting is off.

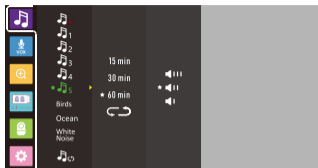





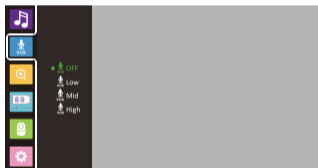

VOX setting

- 1.Press menu button  to access menu.
choose  and press 
- 2.Press the UP key  or DOWN key  to select the VOX level.
- 3.Press  to confirm.
- 4.Press the menu button  to exit after finish.

 
VOX is a voice reactive mode in baby monitor. In VOX mode, the monitor screen will be dark when the camera stays below VOX level for 30 seconds. During this standby period, the video feed is temporarily paused, conserving battery power and extending the monitor's overall runtime. However, the microphone remains active, constantly monitoring for any sounds in baby's room. The screen will wake up and video run again when the camera detect sounds above VOX level. (VOX-H:60db±3 VOX-M:65db±3 VOX-L:70db±3)





Zoom in / out setting

- 1.Press menu button  to access menu.
choose  and press 
- 2.Press the UP key  or DOWN key  to select the magnification.
- 3.Press  to confirm.
- 4.Press the menu button  to exit after finish.

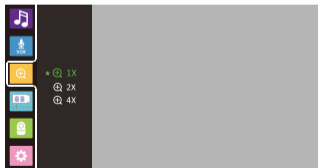NOTE:This function is unavailable in split mode.



Split screen

1. Press menu button  to access menu.
choose  and press .
2. Press the UP key  or DOWN key  to select the desire options.
3. Press  to confirm.
4. Press the menu button  to exit after finish.

NOTE: This function is only available when two or more cameras are paired.



Switch & Scan cameras

Switch cameras

Confirm both cameras are connected.

 
Click the switch/OK button  to switch the video and audio between cameras.

Scan cameras





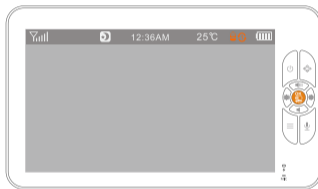


Confirm both cameras are connected.

Long press the switch/OK button  to active the scan mode.

 
In scan mode, the video and audio will switch between cameras every 10 seconds.







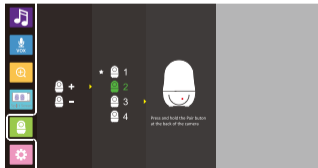

Add camera

 
1. Press menu button  to access menu.
choose  and press .
2. Press the UP key  or DOWN key  to select the camera to be paired.
3. Press  to start the pairing, while the screen shows pairing then press PAIR button on the back of the camera.
4. Press the pair button on the back of the camera.
5. Press the menu button  to exit after finish.

NOTE: Please keep the camera and monitor close together (about 1ft) and confirm they are turn on/plugged in before pairing/ adding camera.







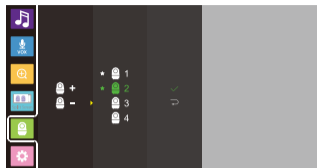




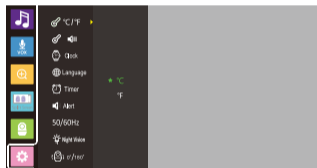 
Delete camera

1. Press menu button  to access menu.
choose  and press .
2. Press the UP key  or DOWN key  to select the camera to be canceled.
3. Press  to confirm.
4. Press the menu button  to exit after finish.












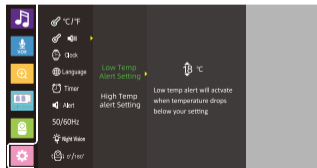 
Temperature unit setting

1. Press menu button  to access menu.
choose  and press .
2. Select  and press .
3. Press the UP key  or DOWN key  to select °C or °F
4. Press  to confirm.
5. Press the menu button  to exit after finish.







 
Temperature alert setting

1. Press menu button  to access menu.
choose  and press .
2. Select  and press .
3. Press the UP key  or DOWN key  to set the maximum and minimum alarm temperatures.
4. Press  to confirm.
5. Press the menu button  to exit after finish.







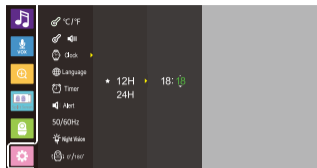




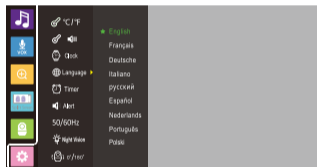 
Time setting

1. Press menu button  to access menu.
choose  and press 
2. Select  and press 
3. Press the UP key  or DOWN key  to select 12H or 24H
4. Press  to confirm.
5. Press the menu button  to exit after finish.












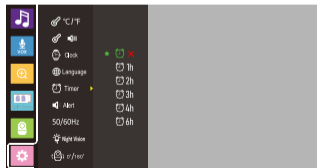 
Language setting

1. Press menu button  to access menu.
choose  and press 
2. Select  and press 
3. Press the UP key  or DOWN key  to select the language.
4. Press  to confirm.
5. Press the menu button  to exit after finish.












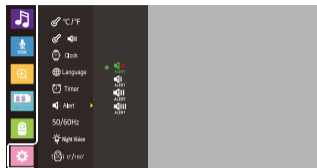 
Timer setting

1. Press menu button  to access menu.
choose  and press 
2. Select  and press 
3. Press the UP key  or DOWN key  to select the desired alert time.
4. Press  to confirm.
5. Press the menu button  to exit after finish.














Alert volume setting

 
1. Press menu button  to access menu, choose  and press .
2. Select  and press .
3. Press the UP key  or DOWN key  to select the desired alert volume.
4. Press  to confirm.
5. Press the menu button  to exit after finish.



Frequency setting

 
1. Press menu button  to access menu, choose  and press .
2. Select  and press .
3. Press the UP key  or DOWN key  to select  or .
4. Press  to confirm.
5. Press the menu button  to exit after finish.

NOTE: 60HZ is available in US/CA/MX. 50HZ is available in most countries of Europe.

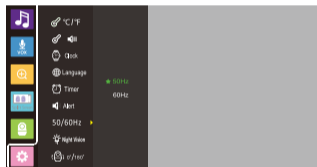





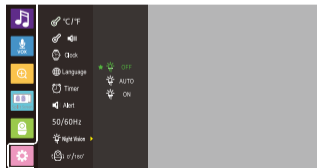


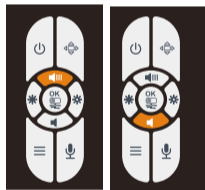 
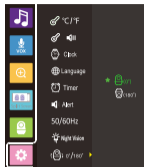 
Night vision setting

1. Press menu button  to access menu, choose  and press .
2. Select  and press .
3. Press the UP key  or DOWN key  to select the state of night vision.
4. Press  to confirm.
5. Press the menu button  to exit after finish.







Camera angle setting

1. Press menu button  to access menu.
2. choose  and press .
3. Select  or  to select the angle at which the camera is placed
4. Press  to confirm.
5. Press the menu button  to exit after finish.




Volume/Brightness adjustments

Press  or  to increase/decrease the sound of the parent unit
Press  or  to increase/decrease the brightness of the parent unit



Talk to baby

Press and hold the button  to talk to your baby
Release the button when you are finished talking

5.TROUBLE SHOOTING

Trouble shooting	
No reception on the Parent Unit	<ul style="list-style-type: none"> • The power adapters may not be properly connected. • Ensure that the Baby and Parent Units are ON. • Make sure the Baby Unit and Parent Unit are not far away from each other. • Baby Unit and Parent Unit may not be properly paired. Follow PAIRING instructions
Interference or poor reception	<ul style="list-style-type: none"> • Move the Baby Unit closer to Parent Unit. • The Baby or Parent Unit may be too close to metal objects. • Other electronic devices may be interfering with the signal. • The battery power may be too low.
Image frozen on the Parent Unit	<ul style="list-style-type: none"> • Restart the Baby Unit (pull out the power adapter from the wall outlet, wait for approx. 5 seconds and plug it back in). • Reset the Parent unit by opening the battery compartment and disconnecting the battery. wait for 30 seconds and then reconnect the battery.

A high pitched ear piercing noise is heard from the units (feedback, static)	<ul style="list-style-type: none"> The Baby Unit and Parent Unit may be too close to each other, move them further apart. The volume on the Parent Unit may be set too high.
Cannot hear the baby sounds on the Parent Unit	<ul style="list-style-type: none"> Volume setting on the Parent Unit may be too low. Increase the volume.
Background noises	<ul style="list-style-type: none"> In a quiet environment surrounding the Parent Unit, decrease the volume on your Parent Unit to level 3 and below. In a loud environment surrounding the Parent Unit, increase the volume on your Parent Unit to the maximum level.
If above tips are not help; maybe the system crashed, please disconnect the battery and the power adapter with your unit; then plug in it again and turn your unit	

If the above troubleshooting guide did not help you solve your problem, please contact our customer service via: service@ifamily.vip

6. TECHNICAL DATA SHEET

Technical data sheet	
Frequency	2.4GHz FHSS
Type of modulation	GFSK
Transmission range	Up to 960 feet/300 meters(Open space -No obstructions)
Input voltage	5V, 1/1.2A
Power adapter	Input: 100-240VAC 50/60Hz, 200mA Max
LCD screen	7"HD TFT LCD
Rechargeable battery	Model: SM70A-2 3.7V, 4000mAh
Transmission Power	18dB
Image sensor type	1/2.9" Color CMOS, 1920*1080 pixels
IR LED Type	940 nm
Operating environment	Indoor use only; Temperature: 32-104F / 0-40 °C; Humidity: 5%-90%rh(relative humidity)

7.FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the Fcc Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

8.Maintenance and Warranty

8.1 Maintenance

All of the following maintenance procedures should only be performed when baby and parent units are unplugged and off.

Clean the surfaces of the baby and parent units with a soft, fluff-free cloth.

Never use cleaning agents or solvents.

If the units become dirty,use a lightly damp cloth to wipe surfaces,taking care not to allow water into any openings.

8.2 Warranty terms

We take quality very seriously.This is why all of our products come with three months warranty(replace or refund)and lifetime technical support from the original purchase date against defects in workmanship and materials.The warranty terms do not apply to any product that has been subject to abuse,misuse, negligence or accident.Defects caused by this warranty.If you have warranty or support issues,please contact the customer service of Amazon seller before leaving your review.

8.3 Information on disposal of product

Always dispose of your product(with the non removeable pre-installed battery)at the end of their life in an environmentally responsible way and in accordance with your local waste disposal requirements.All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.



WARNING:

Keep this cord out of reach of children.
The cord needs to be at least three feet
away from the child at all times.
Do not use with an extension cord.
Do not remove this tag.
Children have STRANGLED in cords.

